

Sinus Jevi Electric Heating B.V.
Aambeeld 19
1671 NT Medemblik
The Netherlands
tel. +31 (0)227-549 100
fax. +31 (0)227-549 150
website: www.sinusjevi.com



INFRAROODSTRALERS type IHS, TA(R) en Sindstra
Handleiding

RADIANT HEATERS type IHS, TA(R) and Sindstra
Manual





De Infratemper type IHS en TA(R) zijn geschikt voor gebruik in natte, vochtige en droge situaties maar ook voor gebruik buitenshuis.

Bevestiging


De Infratemper dient vast gemonteerd te worden aan de muur of plafond. Tevens dient de straler horizontaal gemonteerd te worden. De minimale afstand vanaf de vloer is 1,8 meter. Om de Infratemper te bevestigen dient u de montagebeugels te gebruiken.

Afstandsbepaling


Zorg ervoor dat er tenminste 1 meter vrije ruimte is in de stralingsrichting. Indien de straler gemonteerd wordt aan het plafond dient de minimale afstand tot de muur 30 cm te zijn. Indien de straler gemonteerd wordt aan de muur dient de minimale afstand tot het plafond 15 cm te zijn. Zie ook de tekening hieronder.

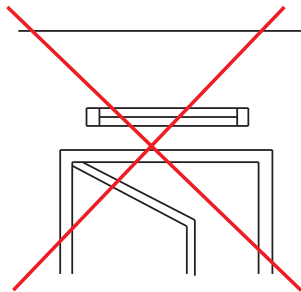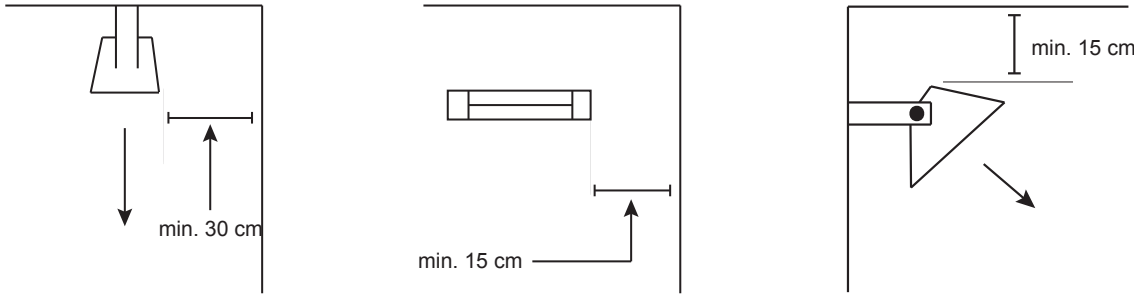

Plaats de infraroodstraler nooit boven een deuropening

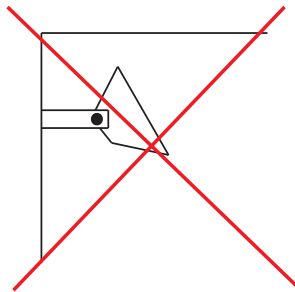

Richt de infraroodstraler nooit naar het plafond

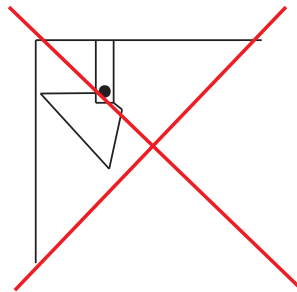

Richt de infraroodstraler nooit naar de muur

Ondanks de beschermklasse raden wij u aan extra voorzorgsmaatregelen te nemen wanneer u de straler buitenshuis monteert.

De infratemper is niet bedoeld voor het verwarmen van lucht. De infraroodstralen zullen uitsluitend de objecten en personen verwarmen die zich binnen de stralen bevinden. Uiteraard zullen de objecten na verloop van tijd warmte afgeven aan de ruimte bij langdurig gebruik.

Schoonmaken

Wanneer de Infratemper uitgeschakeld en afgekoeld is kan de straler schoongemaakt worden met een normaal, niet-agressief schoonmaakmiddel.



The radiant heaters type IHS and TA(R) can be used in wet, moist and dry conditions as well as outdoors.

Installation


Our radiant heaters must be permanently mounted on a wall or ceiling. It must be mounted horizontally. The electrical connection is located in the junction box under the name plate. The heater can be mounted outdoors (on roof or wall) and in bath rooms. *Must be mounted min. 1.8 m above the floor.* In spite of class IP44 we advise to take additional precautionary measures when mounted outdoors.

Dimensioning


Make sure there is at least 1 meter of free space in the heating direction. When mounted on the ceiling the distance to the wall should be at least 30 cm. When mounted on the wall the distance to the ceiling should be at least 15 cm. Please also see the drawing below.

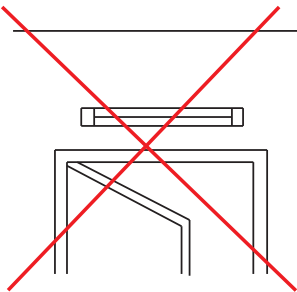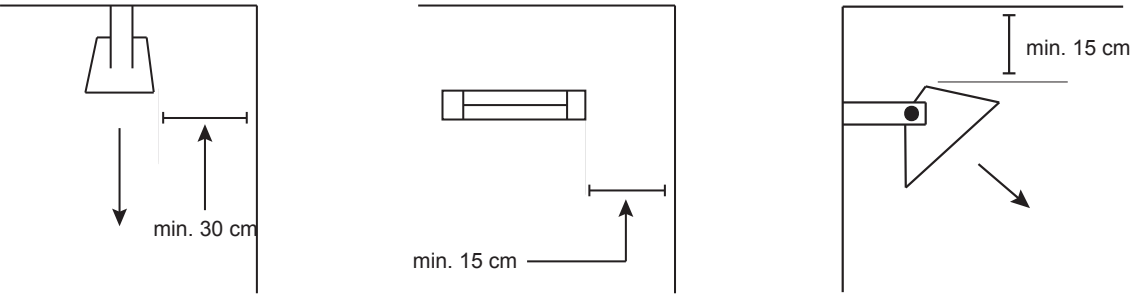

Never place the radiant heater above doorways

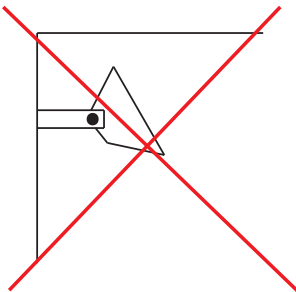

Never point the radiant heater in direction of the roof

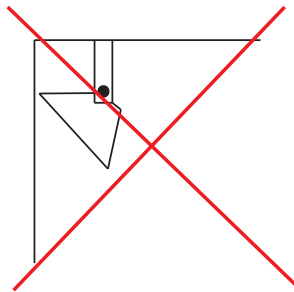

Never point the radiant heater in direction of the wall

In spite of protectionclass we advise to take additional precautions measures when mounted outdoors.

The infrared rays do not heat the air but only the objects affected by the heat rays. If possible, it is recommended to mount several heaters so that the heat is given off from several sides.

Cleaning

Once the radiant heater is switched off and cooled down it can be cleaned with ordinary, non-aggressive detergent.

*No rights can be derived from the text, illustrations and samples.
We reserve the right to change materials, parts, assemblies, designs, colours, finishes etc. without prior notification.*

SINUS
JEVI  Sinus Jevi Electric Heating B.V.
Aambeeld 19
1671 NT Medemblik
The Netherlands
tel. +31 (0)227-549 100

©2014 Sinus Jevi. All rights reserved.

G424.1101 • 12-14